
Instructions on how to connect to William Small Centre (WSC) lab computers remotely

Connect to Yorku VPN

Download Pulse Secure and login with Passport York (please follow the tips on the website
to download the corresponding pulse secure version, and get connect to Yorku VPN)
Windows (http://staff.computing.yorku.ca/internet-access/secure-remote-access/setup-instructions-for-windows-32-and-64-bit/)

<u>MacOS</u> (https://www.yorku.ca/uit/faculty-staff-services/internet-access/secure-remote-access/junos-pulse-setup-instructions-for-mac-osx/)

When connected, the Pulse Secure window should be like the figure below:

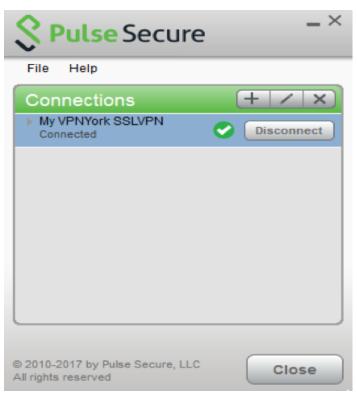


Connect to WSC Lab computer remotely


1. Visit the **remoteaccess website** (https://remoteaccess.labstats.com/york-university-le#computer-group_1157), and you'll find the available computers in WSC 102.




2. Select one available computer by click the **Connect** button, and the steps shown below will guide you to get connected with lab computer remotely.

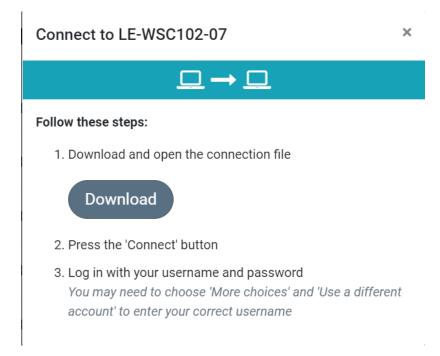


3. Click **Download**, after clicking the **Download**, a file named "*LE-WSC102-*.rdp*" would be downloaded, open the *.rdp file downloaded, and click the **Connect** button.

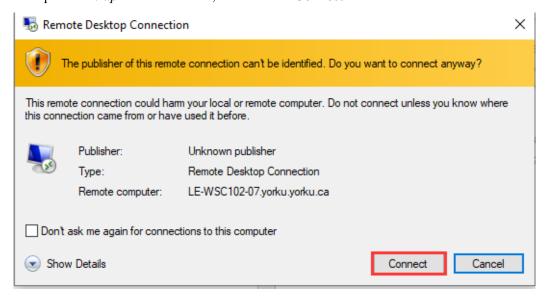


4. If you have already logged in with your own Microsoft Account, you will see such a window. select **More Choices->Use a different account**

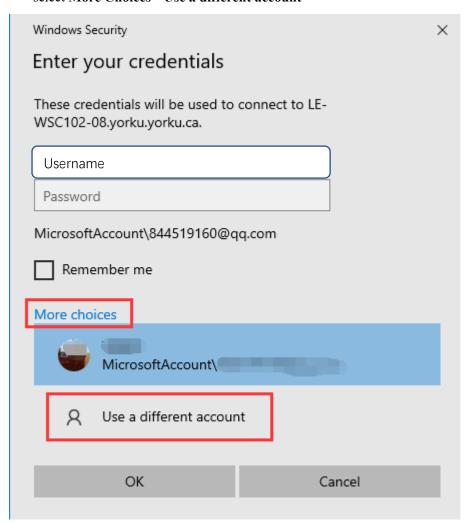


5. Enter your own Passport York, and the username should start with "yorku\", please replace the "username" which is highlighted with your own Passport York username. Click **OK** then.

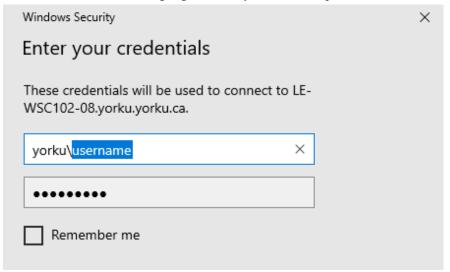

6. After clicking OK, you'll see such a window, and click OK again.

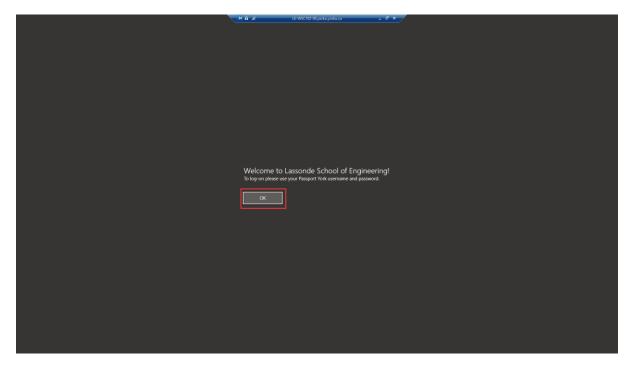


7. After the above steps, you are able to get remote access to the WSC lab computers and start your lab by selecting the CARIS application sofware.

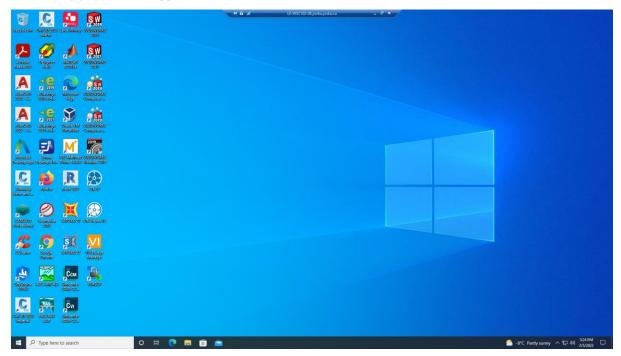


First run with CARIS 11.3


When opening HIPS and SIPS for the first time you will have to define the mandatory parameters.

 Start HIPS and SIPS from the Windows Start menu, select All Programs > CARIS > HIPS 11.3




2. Next Select > Tools> Modules

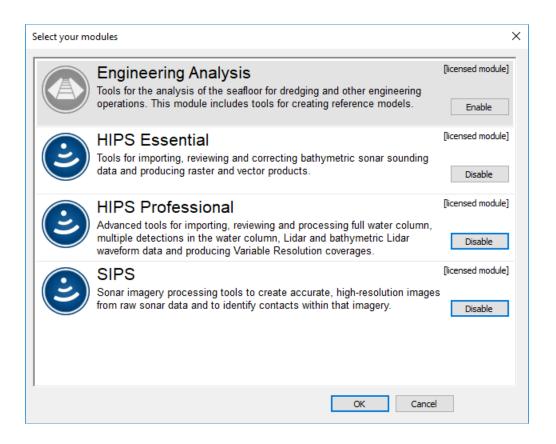

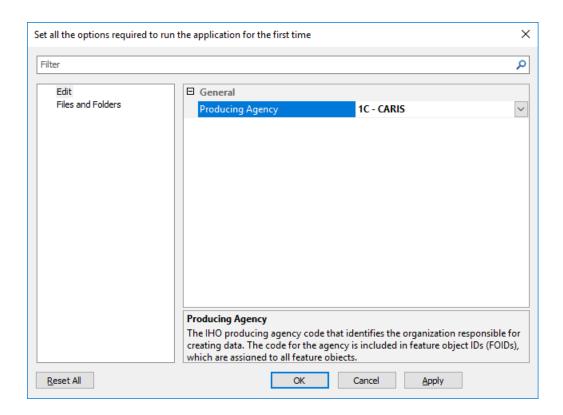

3. Select Edit, click Product Agency and clicking the down arrow **choose 1C - CARIS** from the drop down menu.

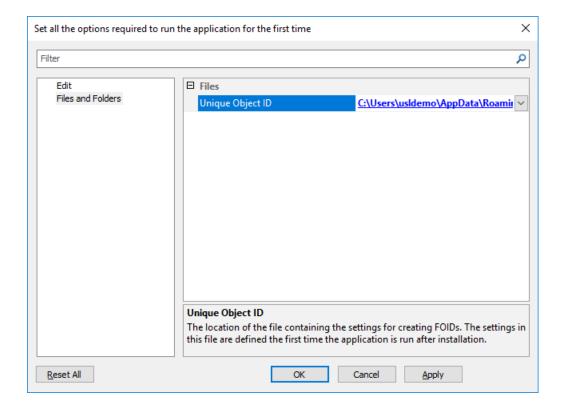

- 4. Select Files and Folders, click Unique Object ID and choose Create Automatically from the drop down menu
- 5. Click OK.

License Activation

